


# ToneArm Alignment Guide For Well Tempered Amadeus

- ① Light Cardboard
- ② 1/4" Hole. Force over spindle
- ③ Point for stylus tip, 1 7/8" from point 2

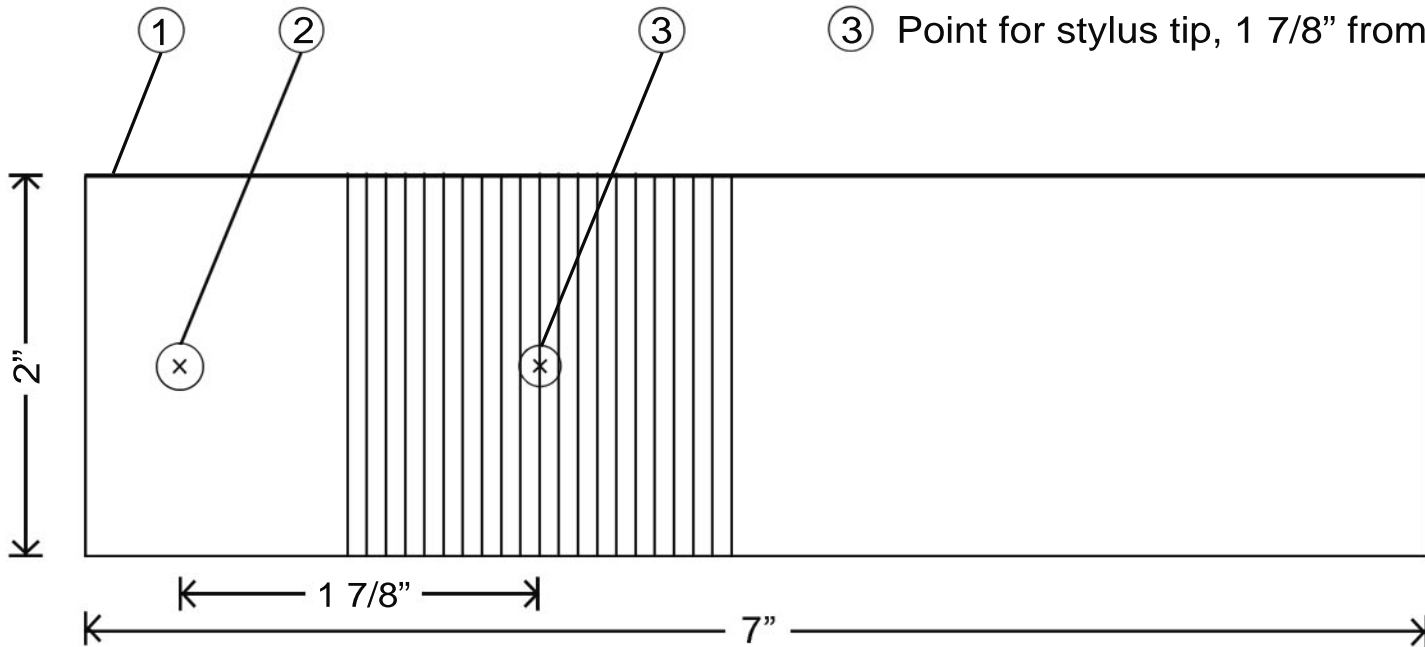

Note: The Amadeus Headshell is factory fixed in position. The Well Tempered Lab unquivocally reiterate that it should not be moved.

Heavy handed mounting of the cartridge may cause the headshell to move. In which case: with the cartridge in place on the headshell carefully place stylus tip on point 3 and align headshell parallel to the lines on the protractor.

It will be necessary to gently but firmly retighten the small screw fixing the headshell to the tonearm. **Do not overtighten this screw.**